


Connect a Booster to single phase supply

Single phase supply to 4 and 8 kW Booster:

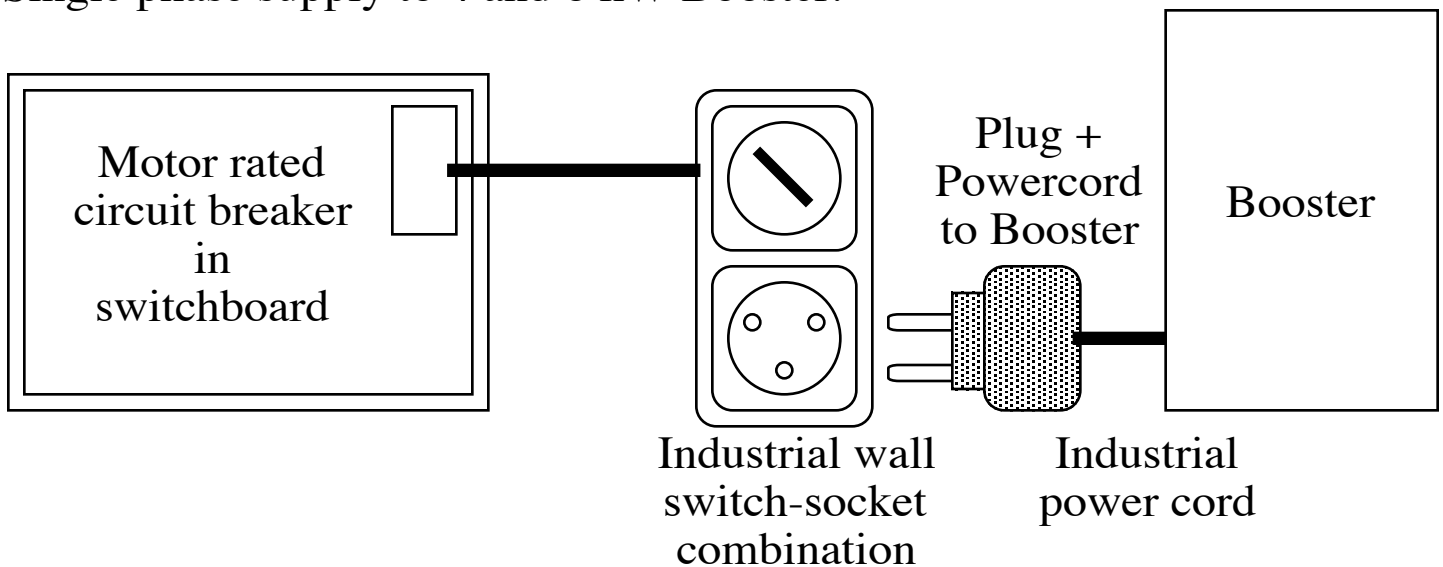

Single phase supply to a larger Booster:

